

Triple+ CLM™ Repeater User Manual

P/N: CLM-REAMAP-3-00, CLM-REEMEA-4-00

◆ **Welcome**

Thank you for choosing Triple+ wireless NWL™ (No Water Leak) system designed to detect water leaks and prevent of subsequent damages. Triple+ NWL™ system will give you peace of mind while at home and out of it.

◆ **Please note**

Please read through the instructions carefully and follow the steps of the system's installation and commissioning.
Please maintain this document in a safe place for future reference. When in any doubt, contact your authorized distributor or installer.

◆ **Triple+ NWL™ system**

The Triple+ CLM™ system detects and prevents gas and water leaks. When the leak is detected, the system disconnects the gas and water supplies, wirelessly activating the shutoff units. Each installation can include multiple various detectors and shutoff units installed on gas and water pipes.

The system is designed to minimize potential flooding damages by shutting down the water supply when the site is inactive and/or when a flooding indication is received.


In addition, the Shutoff can be deactivated deliberately. The water system is designed for internal use and should be installed by an authorized technician.

◆ **Flood detector specification**

Part No.	CLM-REAMAP-3-00, CLM-REEMEA-4-00
Product description	The wireless repeater can be used in order to extend the communication range between the Shutoff Unit, the detectors and the HUB
Dimensions (mm)	59x 80x25
Weight (grams)	125
Power supply	External Adaptor Input 110-240 V AC
Operation voltage	5V
Operating RF	868/915 MHz
Transmission range	Open space - up to 120 m When a wall is within the space - up to 50 m To avoid damaging the wireless communication, avoid installation within metal cabinets.
Standards	In Progress
Working temperature	0-50°C
FCC ID	In Progress
IC ID	In Progress

◆ **Repeater description**

- A. Power cable.
- B. Mount base.
- C. Repeater circuit body
- D. HUB communication LED
- E. Indication RGB LED
- F. Wall mount bracket (on the rear part)

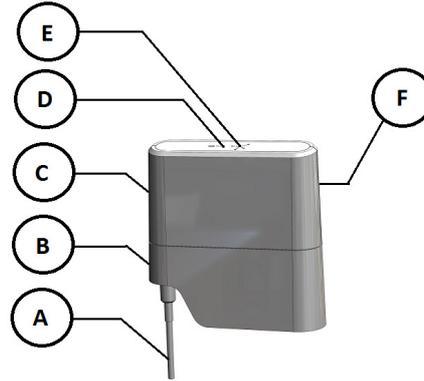

◆ **Repeater installation stages**

1. Locate the best position for installation.
2. Fix the box to the wall using screws or a double sided adhesive tape.
3. After installation, make sure that the LED s are clearly visible.

◆ **System component synchronization and activation**

CLM™ elements are installed and activated using the mobile installer's application by a certified installer. It is recommended to test the unboxed unit for normal operation before its installation.

Warranty instructions

Please visit www.tripleplus.io/support for warranty, technical support, and self-solving tools.